



1. Place the GESP into the Outdoor case. Pull the cables until the GESP is secured into the case.  
Start with the Ethernet cable and then with the grounding cable.

---

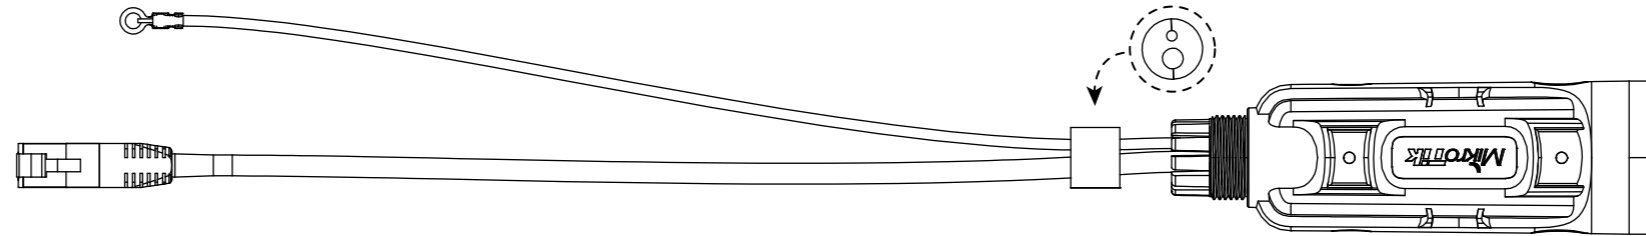


2. Take the rubber plug and fit it onto the cables. The cables must be placed in the matching hole size of the rubber plug.  
Push the rubber plug into the Outdoor case.

---

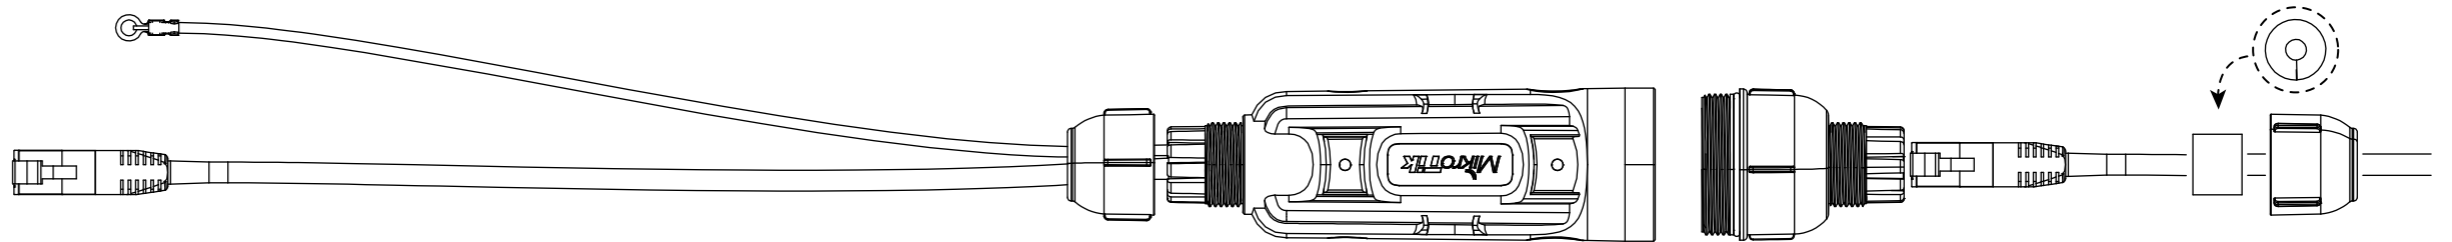

3. Follow the diagram sequence for inserting your ethernet cable. Lastly screw the Small Caps on both ends onto the Outdoor case tightly.

---

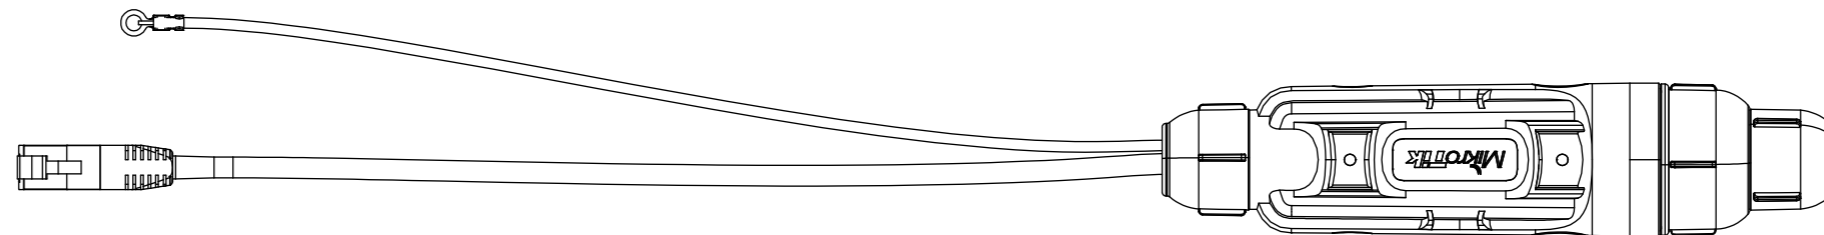

**Assembly done!**